


UT7 Token Timer Quick Set-up Sheet

Programming your UT7 token timer:

1. Plug in token timer (screen should read "00")
2. Open the timer with key (see picture below)
3. Press the "red" button once (screen should now read "1-00")
4. Press and hold the "+", "-", and the "yellow" buttons down until the screen stops changing characters
5. Screen should now read "-000"
5. Press the "+" or "-" buttons to navigate through the different parameters and hit the "yellow" button to program (see parameters below)
6. Then press the "+" or "-" buttons to increase or decrease the parameter setting
7. Press the "red" button to save your changes

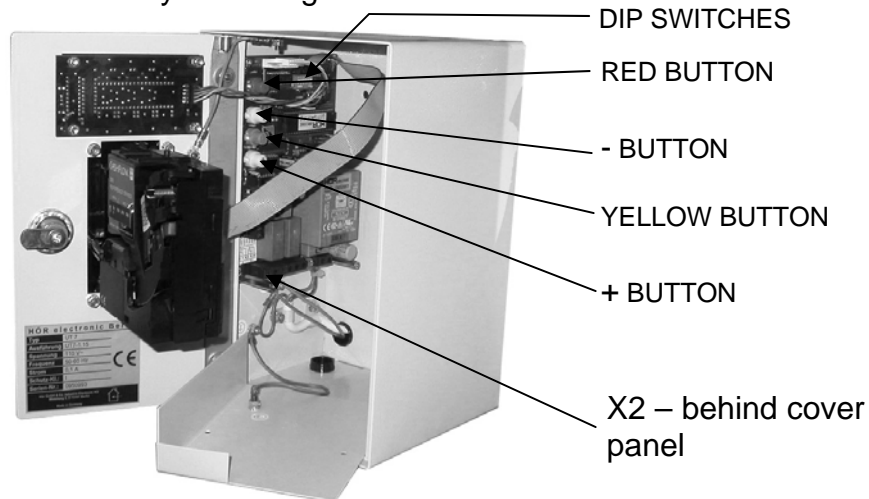

Parameters:


- Parameter "-000" sets the price/value per token/coin
- Parameter "-001" sets the resultant time per the token/coin
- Parameter "-015" sets the maximum time allowed per session
- Parameter "-006" sets the delay time before the session is activated (3 to 5 minutes is typical)
- Parameter "-023" sets the cash value of a token

DIP Switch Settings

Switch OFF = coin accepted
1 – ON = nickels not accepted
2 – ON = dimes not accepted
3 – ON = quarters not accepted
4 – ON = half dollars not accepted
5 – ON = dollar coins not accepted
6 – ON = tokens not accepted

Wiring the UT7 to your tanning bed:

Find the terminal block inside the UT7 token timer marked "X2" (see picture above and illustration below). Connect the remote contact wires from the tanning bed to this terminal block.

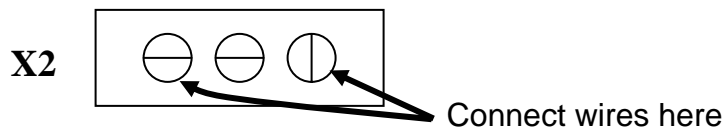

For more in-depth instructions and further options please consult the user manual, or contact our Technical Service Department at **1-800-449-3605**

27650-01A