



Procedure for Replacement of Timer Display on SunStar® Super ZX40/44 Series Sunbeds



DISCONNECT POWER BEFORE STARTING THIS OR ANY SERVICE PROCEDURE REQUIRING THE REMOVAL OF PROTECTIVE COVERS.


Gently pry up the acrylic cover immediately below the timer display. Refer to your User Manual for more specific instructions on how to do this if you are unfamiliar with the operation. Remove the timer display assembly from the acrylic. The assembly (at bottom) is shown upside-down for clarity.

Remove the four screws (A) and washers (B) on the back of the assembly and pull off the back panel (C). Now, gently pull up on the retaining clip (D) and flip the timer board (E) down and out as shown. Be careful not to stretch the ribbon cable (F). A clip secures the timer cable connection (see *connector detail*). Pry the clip away from the connector gently as you pull the


cable (G). Put aside all parts of the old timer display assembly. If you get the two timer displays confused, the old timer display has the cable connector (H) mounted below the board while the new one has the connector mounted above the board, as illustrated below.

Dismantle the new timer display assembly as described previously. Feed the timer cable (G) through the hole in the back panel (C). Connect the cable to the timer display board (E), noting *connector detail*. The connection will click in place when seated properly. Reinstall the timer display board, making sure it snaps in place under the retaining clip (D). Put the back panel on with the four screws (A) and washers (B).

Reinstall the timer display assembly on the acrylic and snap the acrylic cover back in place. Make sure the timer cable is not pinched.

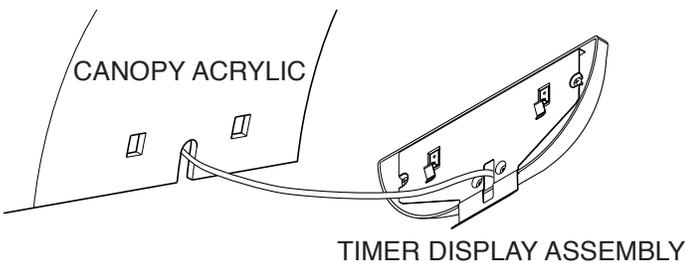

WARNING: Do not touch any metal connector pins with your hands. Static electricity from your body can be transmitted by these pins into the timer and potentially cause damage.

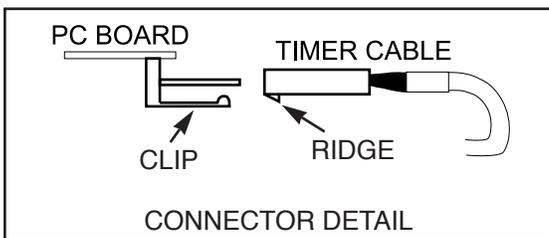

Locate the serial number for your sunbed/booth (usually near where the power cables exit the unit). If the model name reads "F-model name" or simply "model name" you also need to install a resistor cable harness and replace the timer before you can use the unit. Refer to the instructions that came with the resistor cable and timer before proceeding. If it reads "G-model name" or any letter later than "G" the new resistor cable and timer are not necessary.

