



Procedure for Replacement of Timer Display on SUNVISION® Booths



DISCONNECT POWER BEFORE STARTING THIS OR ANY SERVICE PROCEDURE REQUIRING THE REMOVAL OF PROTECTIVE COVERS.

Looking at the front of the booth, remove the right, rear panel. It is held in place by small, Phillips head screws.

The timer display board (A) is held in place by two, long spacer nuts (B). Unscrew the spacer nuts, using a 1/4" wrench, and remove the timer display board. Disconnect the timer supply cable (C) from the timer display board. A clip secures the cable connection. Gently pry the clip away from the connector as you pull the cable.

Put this timer display aside. Plug the timer supply cable (C) into the new timer display board (A), notice the ridge on the front of the cable's connector. The connection will click in place when seated properly (see *Connector Detail*).

Install the new timer display board, using the spacer nuts (B). Reinstall the rear panel.

WARNING: Do not touch the metal connector pins with your hands. Static electricity from your body can be transmitted by these pins into the timer and potentially cause damage.

