



Procedure for Replacement of Endcaps on SunStar® Super ZX32 Series Sunbeds



DISCONNECT POWER BEFORE STARTING THIS OR ANY SERVICE PROCEDURE REQUIRING THE REMOVAL OF PROTECTIVE COVERS.

In order to replace the endcap on your SunStar® Super ZX32 series sunbed, you need to remove the acrylic from the part of the bed that the damaged endcap is on (refer to your user manual for instructions). If you are replacing the endcap at the foot end of the canopy you must remove the body fan (refer to your user manual). If you are replacing the endcap with the timer keypad read ahead for instructions specific to that endcap.


Remove the three inserts from the endcap, right, left and center. Pry the inserts out with a flat-bladed screwdriver. Now remove the screws holding the endcap in place and put them aside. Discard the old endcap and its inserts. This endcap kit includes all necessary inserts to replace any two endcaps.

Install a new endcap with the screws removed earlier. Insert new inserts where needed. NOTE: There is a left and a right small insert. Refer to the detail illustration below. Remember to reinstall the body fan before inserting the center insert if needed. Reinstall the acrylic.

Removing the Endcap with the Timer Keypad

In order to replace the endcap with the timer keypad, you need to remove the cover from the canopy. Simply pry off the colored profile strips, which run the length of the bed, both front and back, and pull the cover off. The cover slips under the endcaps at either end, and the power plate in the back, so some bending is necessary to remove the cover. The cover is designed to flex for this reason. With the cover removed you will see the timer display bracket (A) at the head end of the bed. The detail illustration below shows the bracket in place. If your unit is equipped with face tanners, a black shroud will be obscuring this view of the bracket. You will need to work over the top of the endcap rather than from this view, however the procedure is the same.

Remove the screws (B) which hold the keypad bracket in place and slide the entire keypad assembly out of the endcap. Remove the screws (C) which hold the center insert in place. Refer to the previous instructions to remove the endcap. Replace the endcap, keypad assembly and cover by reversing the above directions.

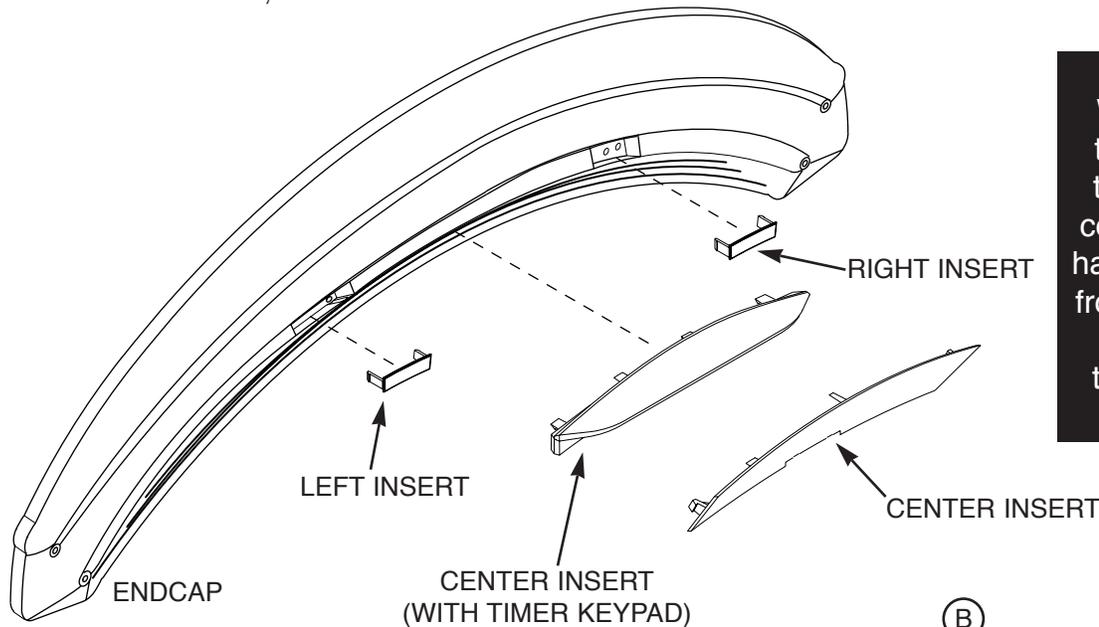

WARNING:
When removing the timer keypad do not touch any electronic components with your hands. Static electricity from your body can be transmitted into the timer and potentially cause damage.

