


Replacing Your Timer Keypad Display

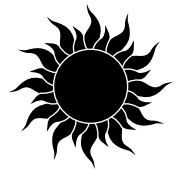

DISCONNECT POWER BEFORE STARTING THIS OR ANY SERVICE PROCEDURE REQUIRING THE REMOVAL OF PROTECTIVE COVERS.

Remove the head end canopy endcap. It is held in place by seven Phillips head screws. When removing the endcap, be aware of the keypad to timer wiring harness.

Carefully unplug the keypad to timer wiring harness from the timer keypad printed circuit board (PCB). Unscrew the two screws holding the PCB in place. Unplug the PCB from the timer keypad pushbutton connector and discard the affected PCB.

Install the new PCB by reversing the above directions, making sure all connections are secure.

