

Solaris® 36/42 Speaker Assembly Installation Instructions

IMPORTANT NOTE: This procedure is for a 2001, and newer, model unit. If the head end bench endcap does not have accessory attachment holes, like the ones shown below, you will also need a new endcap to install the speaker assembly. To replace the endcap, simply unscrew the old one and secure the new one in place with the same screws.

Remove the small metal cover from the head end bench endcap to reveal the accessory attachment holes (shown below). You may discard this cover.

Use the two 5/16"-18x3/4" hex head bolts and 5/16" washers to mount the Speaker Assembly to the head end bench endcap as shown. Feed the speaker wires through the center hole in the speaker mounting bracket, through the endcap and out the back of the bench. You may find it helpful to remove the endcap when running the wires through the bench as there are access holes behind it. Connect the speaker wires to your stereo as described in your stereo manual.

