




Procedure for Replacement of Trim Profile Strips on SunStar ZX32 Series Sunbeds

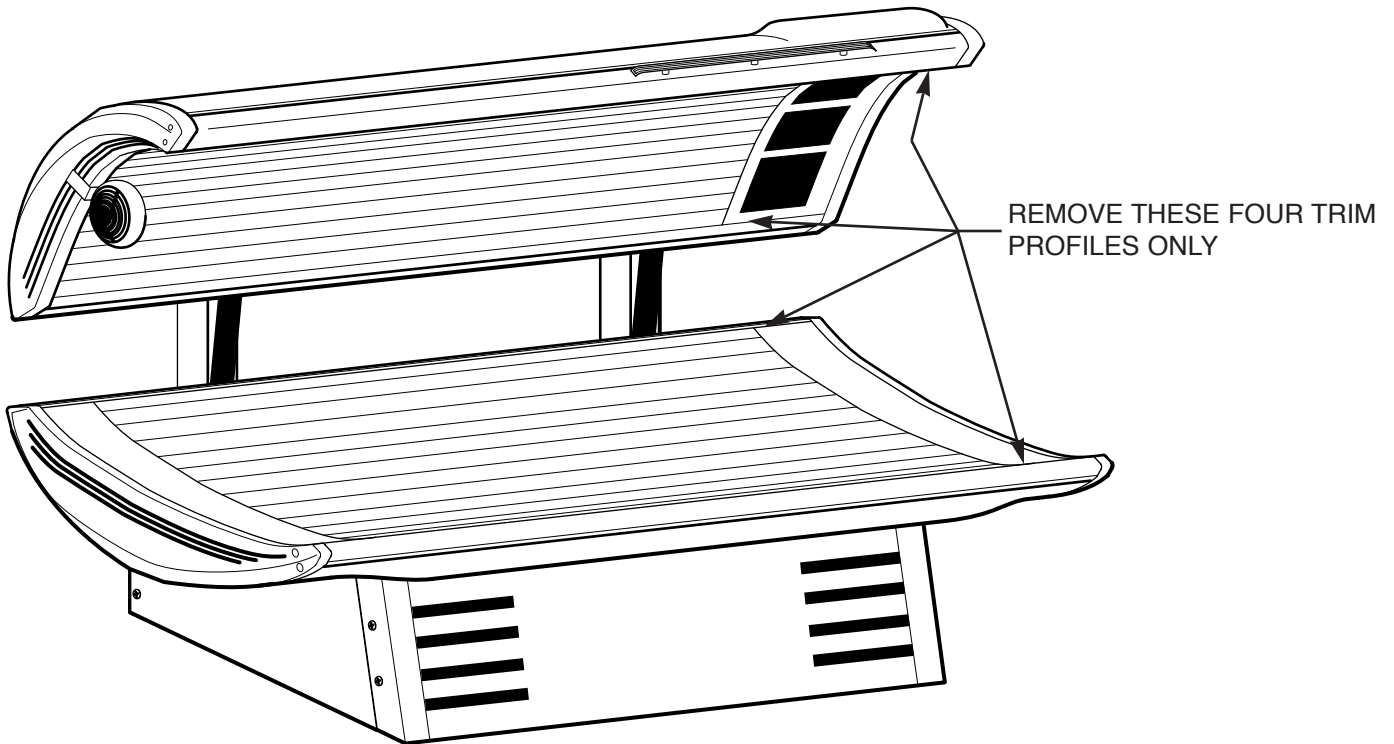

Remove the four trim profiles that hold the acrylics in place, diagrammed by the arrows in the above illustration. To remove the trim profile strips, use the enclosed profile strip removal tool to pry up the trim profile strip at the center and work out toward the ends, as explained in the instructions that come with the tool. To replace the four trim profile strips, insert the ends under the grooves of the endcaps. Run your thumbs firmly along the trim profile strip until it snaps into place. Please note the illustration below for proper positioning. Make sure the longer side of the trim profile strip is holding the acrylic.

If you have any questions, please contact the Service Support Line at 1-800-449-3605.

