

TO CANOPY THROUGH
TUBE ASSEMBLY



STEP 4

Connect the loose end of long harness to white/blue side of capacitors as shown.


STEP 3

Replace entire connector.

STEP 7

Move one black (double wire) from C1 to C2.

Modified schematic for the ZX44

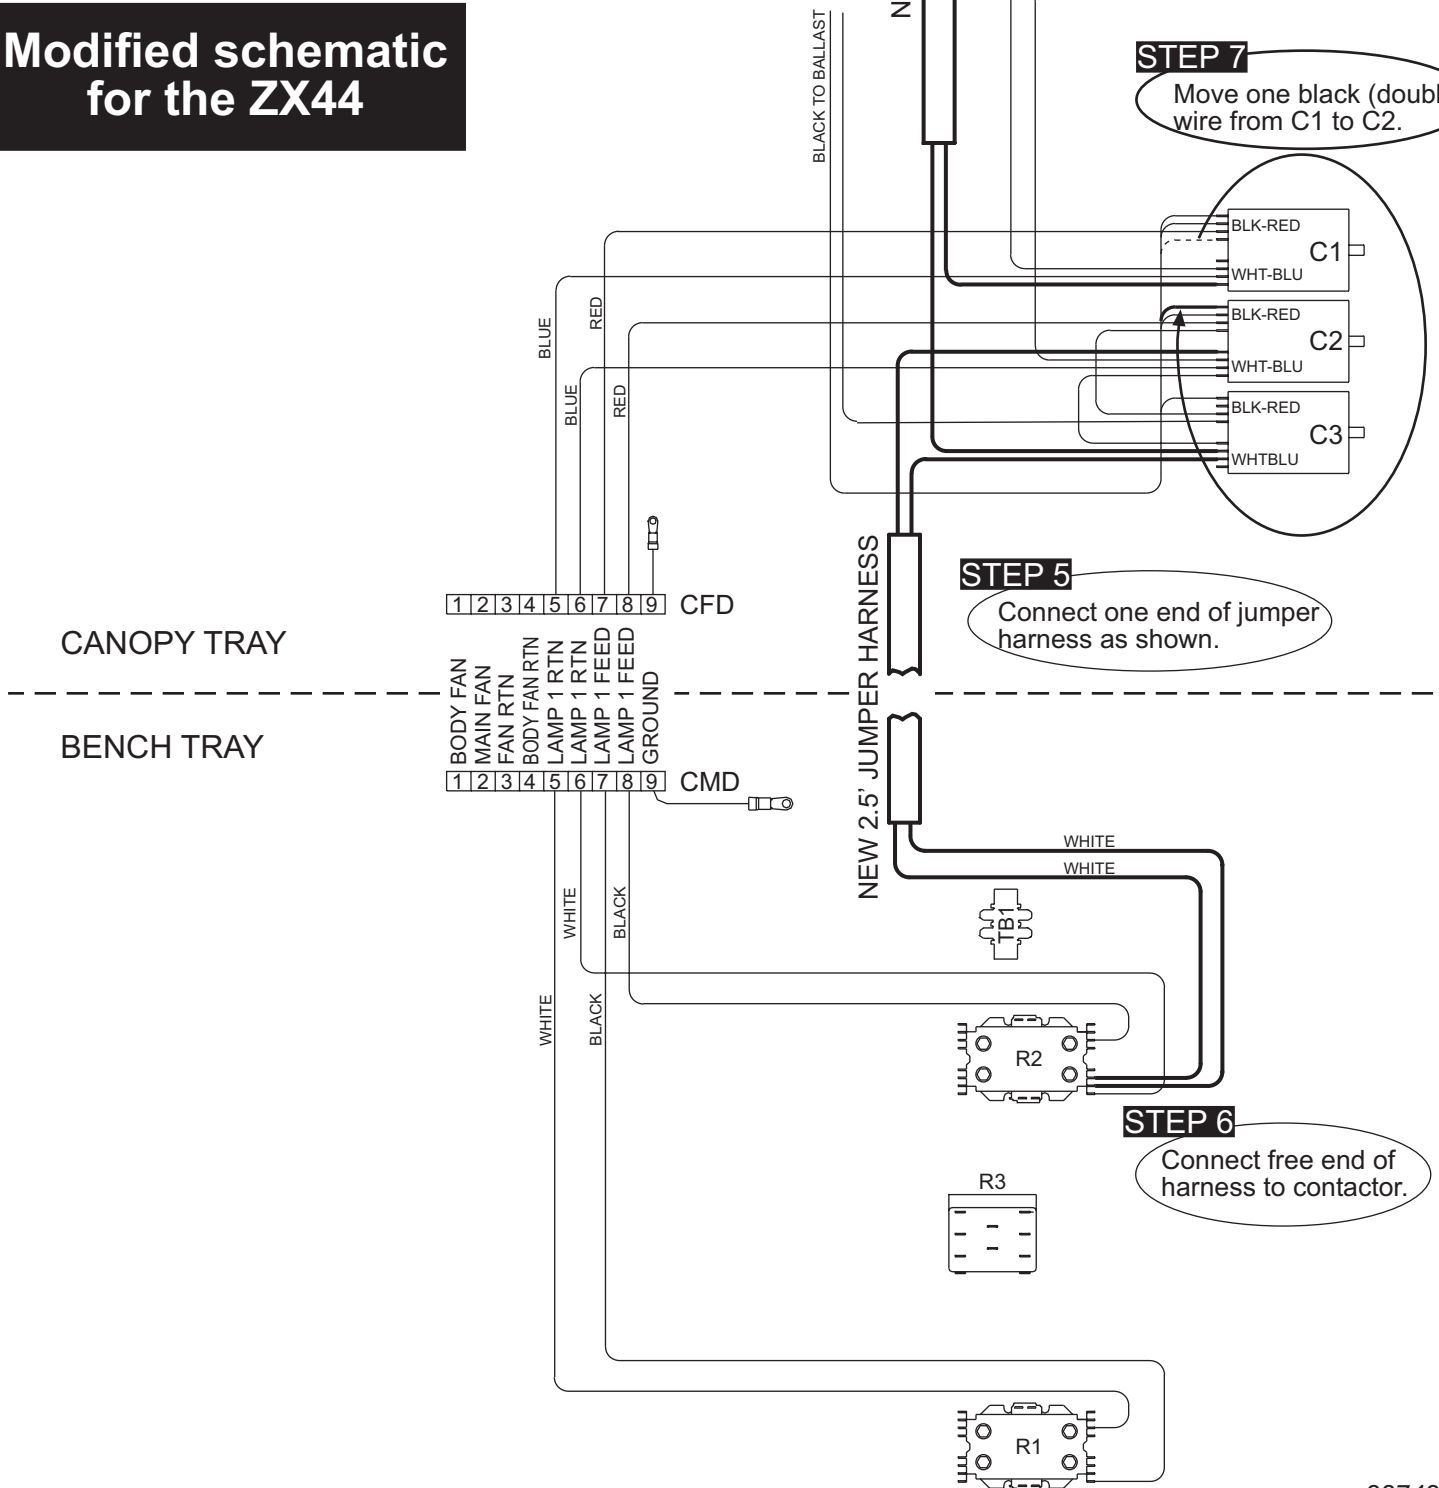

STEP 5

Connect one end of jumper harness as shown.

STEP 6

Connect free end of harness to contactor.