



Procedure for Installation of Optional Body Fan




WARNING

Disconnect power to the sunbed before starting this or any procedure requiring the removal of any protective covers or acrylic shields.

1. Locate the center insert in the foot end canopy endcap. Carefully remove it with a flat bladed screwdriver. Behind that insert is a pre-installed mounting bolt. Remove the bolt.
2. Orient the body fan bracket to the endcap so that the body fan hangs inside the bed, as per the illustration. Mount the body fan using the mounting bolt through the center bracket mounting hole. Route the body fan wire in one of the channels in the bracket to avoid pinching when the insert is replaced.
3. Plug the cord from the body fan into the cord from the bed (found behind the insert removed in step 1) noting *detail 1* at right.
4. The center insert must be slightly modified before replacing. On the back of the insert you will see an area where the body fan bracket will fit in. Carefully snap the area off of the insert with a pair of plyers or wire cutters. See illustration below.
5. Reinstall the insert in the endcap.

Note wire routing!

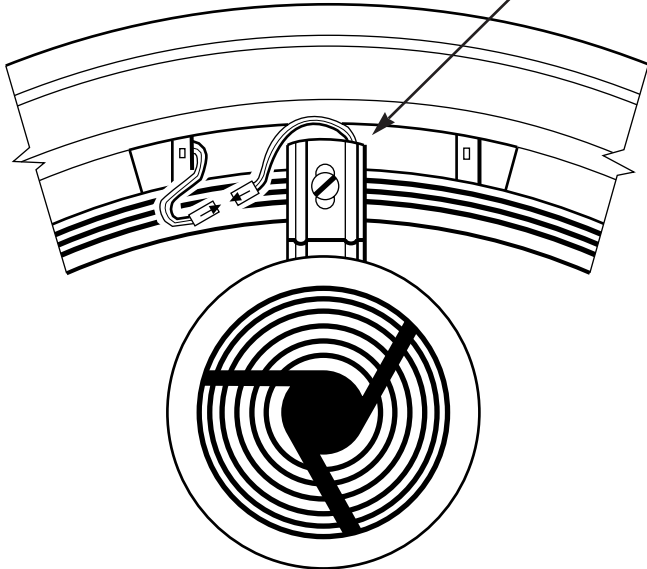

DETAIL 1

