


Procedure for Replacement of Canopy Endcaps on the SunQuest® Pro 14SE

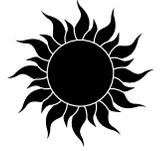

DISCONNECT POWER BEFORE STARTING THIS OR ANY SERVICE PROCEDURE REQUIRING THE REMOVAL OF PROTECTIVE COVERS.

You will need a helper to perform this procedure. This endcap replacement kit contains the necessary parts to replace two canopy endcaps. First, remove the wire grid from the canopy. Next, remove the gas springs from the sunbed. Refer to your user manual if you need further instruction.

Pry off the white trim caps (see right). Loosen the nuts holding the hinge arm to the bench a few turns. Remove the nuts holding the canopy. Remove the canopy and place it on the floor. The endcaps are held in place by #10 x 1-1/4" Phillips head screws, as shown below. Unscrew the endcap from the unit and save the screws. The replacement endcaps already have the ball end studs installed, so you need to match the new endcap with the one you removed.

Put a new endcap in place and line up all necessary holes. Secure the new endcap with the #10 x 1-1/4" screws removed earlier. Install the new

hinge bolts. Now reassemble your sunbed. Put the hinge brackets back on (if removed), attach the canopy to the hinge brackets and tighten all nuts. Snap on the trim caps. Reinstall the gas springs. Remember to install the locking clips in the gas springs. **DO NOT** lower canopy until both gas springs are in place and the locking clips are installed! Failure to install locking clips may result in the ball joints working loose, allowing the canopy to fall, which may cause serious injury! Reinstall the canopy grid, and your unit is ready for use.

