


## Modification of Cover Support Bracket

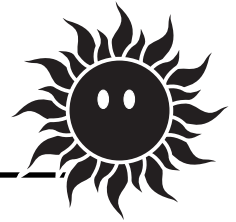

DISCONNECT POWER BEFORE STARTING THIS OR ANY SERVICE PROCEDURE REQUIRING THE REMOVAL OF PROTECTIVE COVERS.

Remove the trim strips and canopy cover from your sunbed. Inside the canopy you will find a metal cover support bracket, like the one shown below, secured to the arched frame rails that span the width of the bed.

Unscrew the Phillips head screws that hold the bracket and reattach the bracket to the holes directly to the outside of the current holes (see below). By doing this, the top of the cover support bracket is lowered, allowing the canopy cover to fit better.

Replace the canopy cover and trim strips. If this does not fully correct the problem, you may bend the upright sections of the support bracket slightly to lower the top of the bracket even more.

