



## Replacing Ballast Cords

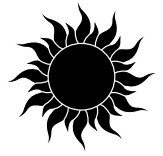

DISCONNECT POWER BEFORE STARTING THIS OR ANY SERVICE PROCEDURE REQUIRING THE REMOVAL OF PROTECTIVE COVERS.

Disconnect all cords from the back of the sunbed and pull the ballast drawer completely out from under the unit. The ballast drawer lid is held on by four Phillips head screws, as shown at right. Remove the cover. Along the top, back edge of the drawer is a sheet metal flange that secures the strain reliefs on the ballast cables. Remove this flange, shown below.

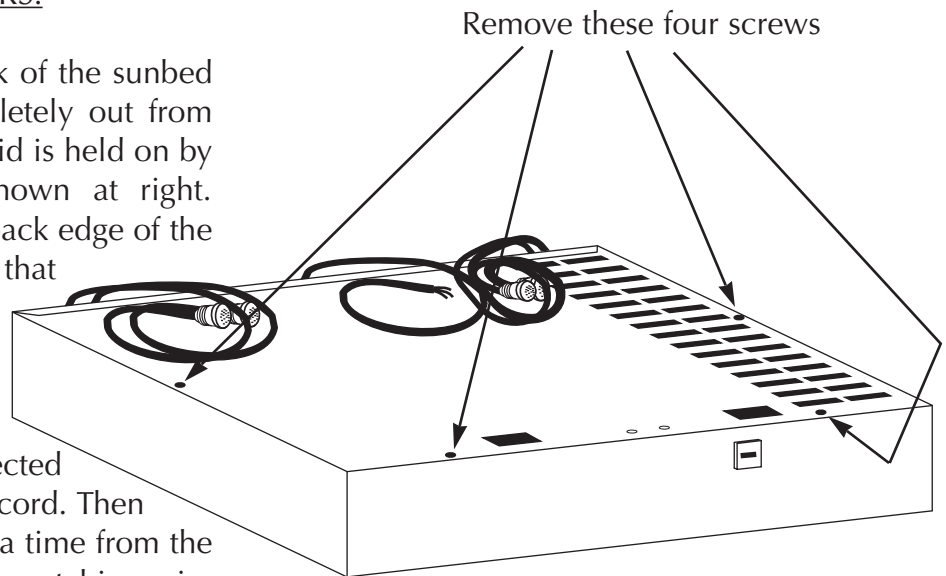

Match the connector of the affected cord with that of the replacement cord. Then proceed to disconnect one wire at a time from the affected cord and replace with the matching wire from the new cord.

Slide the strain relief, on the new cord, into the proper slot on the back of the ballast drawer. Replace the metal flange to secure the cords in place. Secure the lid in place. Push the drawer back under the bed and plug the cords into the back of the unit, making sure to plug in the right connector on the canopy in before the left.

