
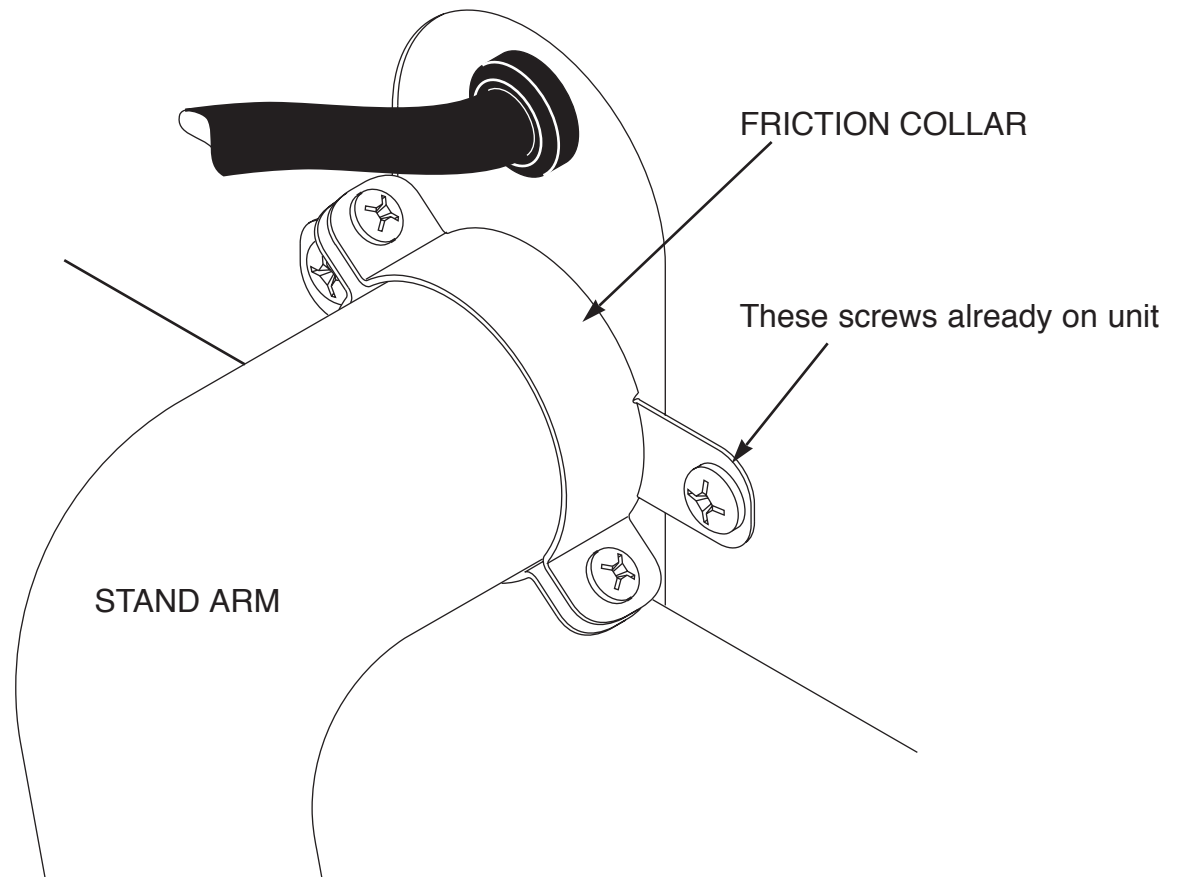


# SunQuest®

## Tanning Canopy Pivot Upgrade

In this upgrade kit you should find two friction collars, two #8-32x1/2" screws and two #8-32 nuts. You will need a Phillips screwdriver and a 5/16" wrench.

At the back of the canopy, where the stand arm enters the unit, you will find two Phillips head screws. Use these to attach the two collars as shown. Both collars are identical. The screws included in this kit connect the collars together and squeeze them together to create friction on the stand arm. Secure these screws with the nuts as shown and tighten them until the canopy rotates as you like.

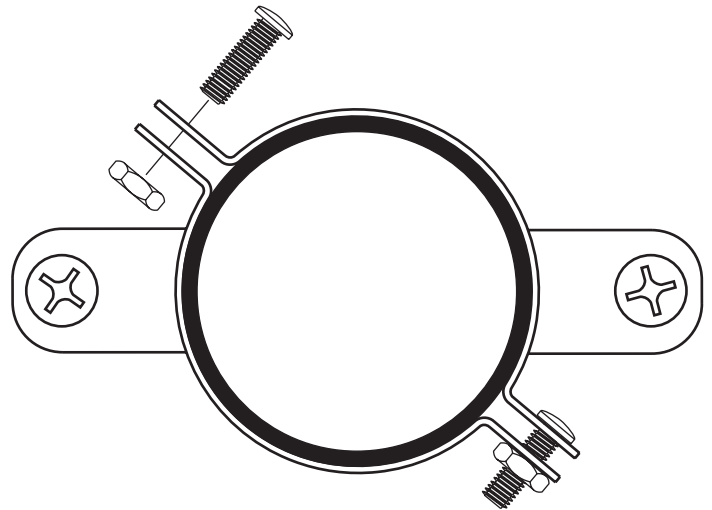

NOTE: The handling strap has been removed from the illustration for clarity.