


Replacing a DIVERSITEC Ballast with a MagneTec Ballast

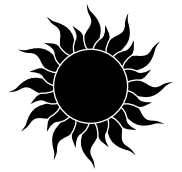

	⚠ WARNING
	Shock hazard. Disconnect power before performing this procedure.

While the two ballasts look different, they are direct replacements for each other. Both have the same number of wires with the same colors.

To begin the replacement, remove the cover from the affected unit. Without disconnecting any wiring, unscrew the affected DIVERSITEC ballast and move it out of the way, by placing it on top of the ballast next to it. Secure the new MagneTec ballast in its place, with the colored wires running in the same direction as the other ballast. Now, one at a time, disconnect a wire and replace it with the new one of the same color. When you have switched all eight wires you are done with the ballast replacement. Reinstall the sunbed cover and any other pieces removed.

DIVERSITEC Ballast
(black and white wires missing)



MagneTec Ballast