


Replacing Your Timer Keypad/Endcap Assembly

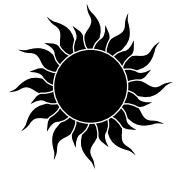

Remove the head end canopy endcap. It is held in place by four (4) Phillips head screws. When removing the endcap, be aware of the keypad to timer wiring harness. Save the screws to install the new endcap

Carefully unplug the keypad to timer wiring harness from the Timer Keypad Printed Circuit Board (PCB). Unscrew the two screws holding the Timer Keypad PCB in place. Unplug the PCB from the Timer Keypad Pushbutton connector and save the PCB for installation into the new endcap.

Install the PCB into the new endcap by reversing the above directions, making sure all connections are secure. Attach the endcap assembly to the sunbed with the four (4) screws, making sure the keypad to timer wiring harness does not get pinched.

	! WARNING
	Shock hazard. Disconnect power before removing any protective covers.

Keypad to Timer Wiring Harness

