



IMPORTANT

Four (4) washers have been added to this packet since the printing of your manual. When installing the dome to the top of the unit, use these washers along with the four (4) #10 x 1/2" screws.


This packet contains:

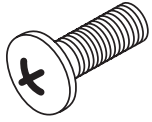

#10-32 x 1/2" Screw
Quantity - 4



#10 x 1/2" Screw
Quantity - 4

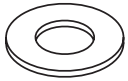


#10 Flat Washer
Quantity - 4

24172-01A


IMPORTANT

Four (4) washers have been added to this packet since the printing of your manual. When installing the dome to the top of the unit, use these washers along with the four (4) #10 x 1/2" screws.


This packet contains:

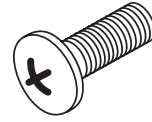

#10-32 x 1/2" Screw
Quantity - 4

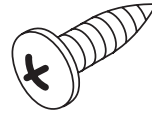

#10 x 1/2" Screw
Quantity - 4

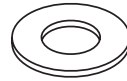


#10 Flat Washer
Quantity - 4

24172-01A


IMPORTANT

Four (4) washers have been added to this packet since the printing of your manual. When installing the dome to the top of the unit, use these washers along with the four (4) #10 x 1/2" screws.

This packet contains:

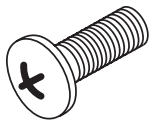

#10-32 x 1/2" Screw
Quantity - 4

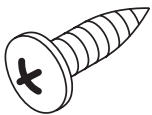

#10 x 1/2" Screw
Quantity - 4



#10 Flat Washer
Quantity - 4

24172-01A


IMPORTANT

Four (4) washers have been added to this packet since the printing of your manual. When installing the dome to the top of the unit, use these washers along with the four (4) #10 x 1/2" screws.

This packet contains:



#10-32 x 1/2" Screw
Quantity - 4

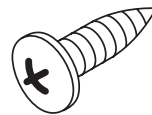

#10 x 1/2" Screw
Quantity - 4



#10 Flat Washer
Quantity - 4

24172-01A