


Replacing the Timer and Timer Bezel on a SUNVISION® 28LE Series Sunbed

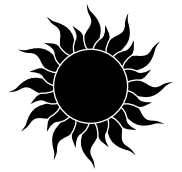

⚠ WARNING

⚡


Shock hazard.
Disconnect power before performing this procedure.

Replacing the Timer

Pry off the plum colored trim strip that runs along the front of the canopy (see picture at center). Remove the two screws holding the timer in place. Gently pull the timer from the sunbed. Be careful of the wires. Carefully pull the wires from the back of the timer unit (see picture below left). Discard the old timer.


Take the new timer and plug the wires onto the appropriate connectors on the back of it. Carefully slip the timer assembly into place and secure with the screws removed earlier. Replace the plum strip.

(2) Remote Interface Cables

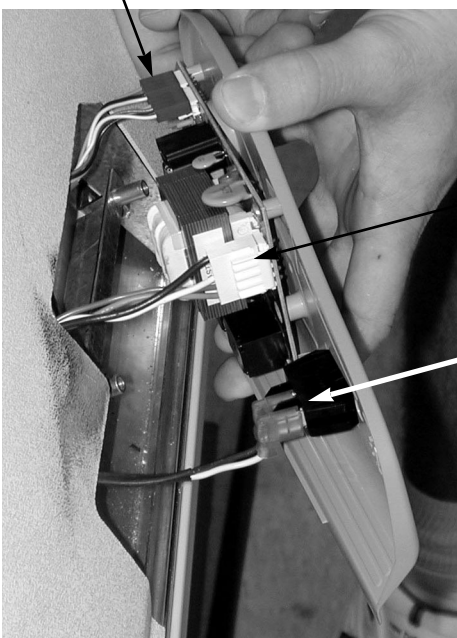

Main Power Cable

Face Tanner Wires

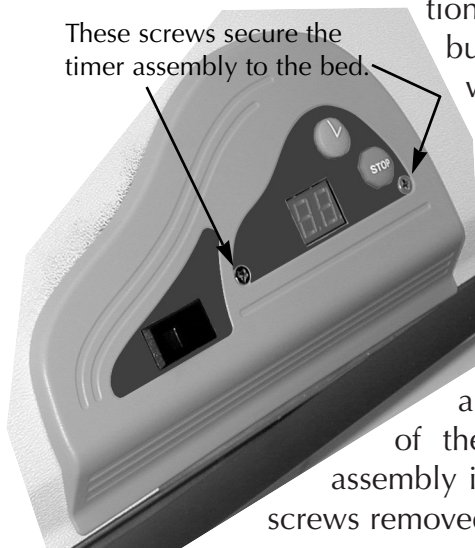

Replacing the Timer Bezel Only

Pry off the plum colored trim strip that runs along the front of the canopy (see picture at center). Remove the two screws holding the timer in place. Gently pull the timer from the sunbed. Be careful of the wires. Carefully pull the wires from the back of the timer unit (see picture below left).

Turn the timer assembly over. Remove the four screws that hold the timer to the bezel (see picture below right). Keep the old bezel for reference in the next step.

The new bezel kit contains a new bezel, decals, timer buttons and a face tanner switch. Apply the same decals to the new bezel as you had on the old one. If your bed is equipped with a face tanner, install the face tanner switch in the same orientation it was in the old bezel. The timer buttons are included in case you want to change the old buttons. Small fingers on the back of the buttons simply pull through holes in the timer board.

Screw the timer to the new bezel with the four screws removed earlier. Plug the wires onto the appropriate connectors on the back of the timer. Carefully slip the timer assembly into place and secure with the two screws removed earlier. Replace the plum strip.

