

Subject: How To Remove A Cover –
SunStar® 332/432

Number: SRV0022


Applicability: SunStar 332 series
SunStar 432 series

Date: 4/28/2006

Overview: This procedure covers many models, but all have the same cover design. Proceed carefully and avoid pulling any wiring. **Always disconnect power before removing any protective covers.**

- Procedure:**
1. Remove the two canopy endcaps. Four screws secure each endcap. Be careful when removing the head-end endcap. You will need to disconnect the timer display.
 2. Along the back edge of the cover are seven screws. Remove these as well.
 3. With the endcaps removed, the cover pinch extrusion is visible (see below).
 4. Loosen the screws holding the pinch extrusion (do not remove) and let the extrusion drop away from the cover.
 5. You can now lift the cover from the bed. The canopy will rise due to the decreased weight.
-
1. To reinstall the cover, first place the cover on the canopy and secure the back edge with the seven screws. Be careful not to cross-thread or strip the threads.
 2. With the front edge of the cover in the front, champaign extrusion, pinch it with the pinch extrusion and tighten the screws to secure the front edge.
 3. Attach the endcaps. Remember to plug in the timer display.

SCREW FOR
PINCH EXTRUSION

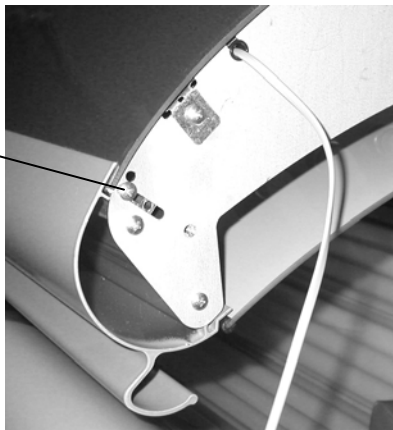

NOTICE: This document and the information disclosed herein are proprietary data of ETS, Inc. Neither this document nor the information contained herein shall be used, reproduced, or disclosed to others without the written authorization of ETS, Inc. except to the extent required for installation or maintenance of the recipient's equipment.

CAUTION: ETS, Inc. Service Bulletins are intended for use by experienced service technicians. They are written to inform those technicians of conditions that may occur in some equipment, or to provide information that could assist in the proper servicing of the equipment. If a condition is described, DO NOT assume that this service bulletin must be applied to your equipment, or that your equipment will develop that condition. Always consult your ETS, Inc. Technical Service Representative before performing any modifications to your equipment. When electrical service is needed, we recommend hiring a professional electrician.