




Procedure for Replacement of Expression Style Endcaps

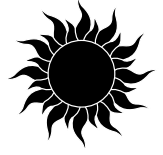

DISCONNECT POWER BEFORE STARTING THIS OR ANY SERVICE PROCEDURE REQUIRING THE REMOVAL OF PROTECTIVE COVERS.

You will need a helper to perform this procedure. This endcap replacement kit contains the necessary parts to replace two endcaps. First, remove the acrylic shield, or canopy grid, from the part of the unit with the damaged endcap. Next, removed the gas springs from the sunbed. Refer to your user manual if you need further instruction. Then detach the canopy from the hinge brackets and place it on the floor. If you need to replace an endcap on the bench you will also need to remove the hinge brackets.

The endcaps are held in place by #10 x 1-1/4" Phillips head screws, as shown below. Unscrew the endcap from the unit. The replacement endcaps already have the ball end studs installed so you need to match the new endcap with the one you removed.

Put the new endcap in place and line up all necessary holes. Secure the new endcap with the #10 x 1-1/4" screws removed earlier. Now reassemble your sunbed. Put the hinge brackets back on (if removed), attach the canopy to the hinge brackets and reinstall the gas springs. Remember to install the locking clips in the gas springs. DO NOT lower canopy until both gas springs are in place and the locking clips are installed! Failure to install locking clips may result in the ball joints working loose, allowing the canopy to fall, which may cause serious injury! Reinstall the acrylic, or canopy grid, and your unit is ready for use.

