



# IMPORTANT - READ ME

Assembly of your booth differs from the manual. Read this instruction sheet carefully.


The remote cable coming from the booth connects to the timer in a different manner than described in your manual. Follow these steps when installing the timer.

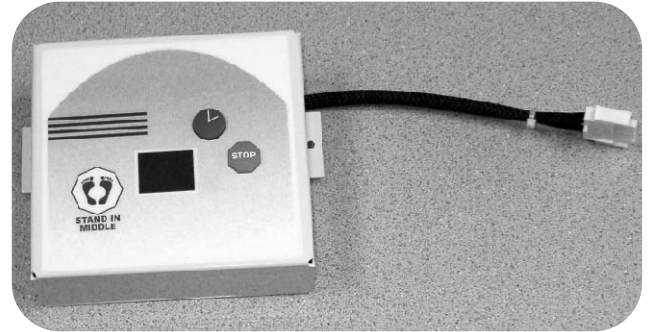


**1** Remove the two screws holding the back of the timer box.

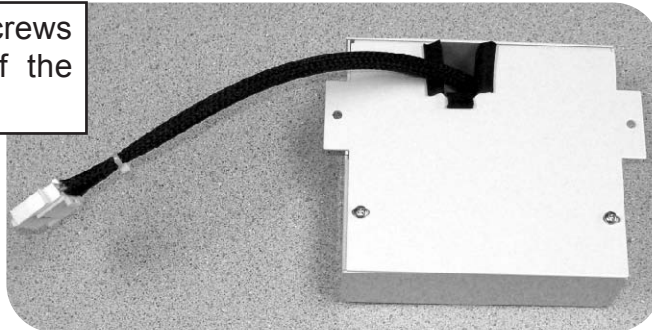

**2** Plug the wire harness with 10 white wires coming from the top of the Control Module onto the 10-pin connector on the timer board as shown. Make sure the locking ramp on the harness locks into the catch on the connector.

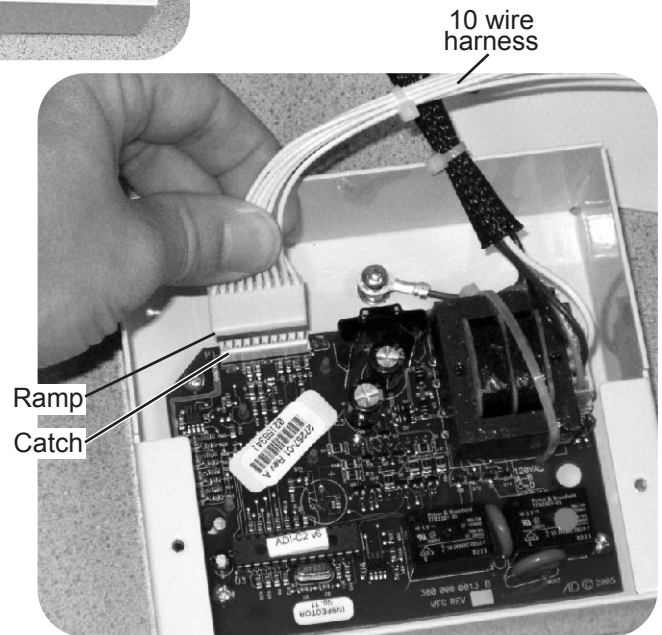

**3** Secure the back cover onto the timer box, with the wires through the notch, with the screws removed before.

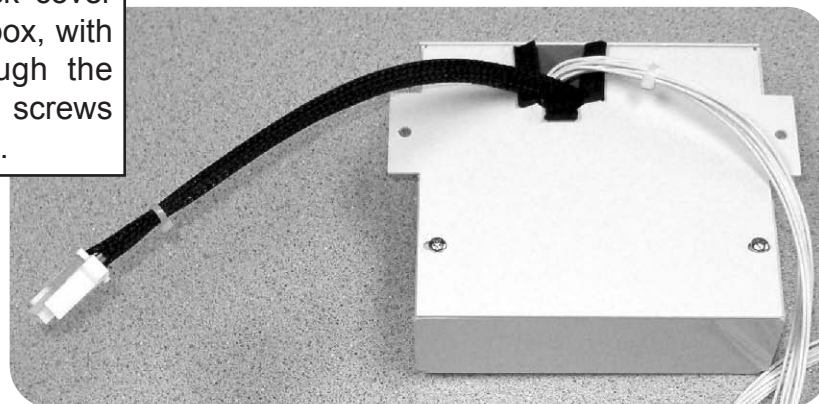

**4** Refer to the manual to complete the installation process.